

Personal Emergency Response

Help Is Only a Button Press Away

Introducing the WHERESAFE Personal Emergency Response Device, a small wearable device that works with a smartphone to sound an alarm and send out urgent calls and text messages with the press of a button. Summon help wherever and whenever you should need it. The WHERESAFE is an ergonomically designed device that can be carried discreetly in a pocket or purse, or worn with one of several accessory options such as a pendant, wristband, or belt clip.

Latest Technology

Using Bluetooth Smart (Bluetooth 4.0 LE) technology, the WHERESAFE initiates calls and text messages from a designated smartphone (iOS or Android). With a single button press, the WHERESAFE sends a command to your smartphone to transmit your location along with a personalized text message to up to three preselected contacts. The WHERESAFE can even initiate follow up phone calls from your smartphone to ensure you get your contact's attention.

Peace of Mind

The WHERESAFE has a fall detection feature that will send an alert if it detects a sudden fall that may have left the user incapable of pressing the alert button. Fully waterproof, the WHERESAFE works in the shower and while exercising.

No need to recharge the battery as it will last for up to a year before needing to be replaced.



Features



Text & Call After pressing the button, the WHERESAFE transmits a command to your smartphone to send a text message to your preset contacts, followed by phone calls. This alert behavior is customizable.



GPS Location In addition to the alert text messages and phone calls, the location from your smartphone can be sent to your emergency contacts



Automatic Fall Detection The user can turn on Fall Detection to enable the alert to be sent automatically after a 60 second countdown



Wireless Range The WHERESAFE must be within range of your smartphone to operate. It has a wireless range of up to 25 metres indoor or up to 75 metres outdoor using Bluetooth 4.0



Android & iOS Compatible The WHERESAFE works with iPhone 4S/iOS 7 or newer and any smartphone using Android 4.3 or newer with Bluetooth 4.0



No Charging Needed The WHERESAFE has up to one year of battery life and powered by a standard CR2032 watch battery. The battery is removable and replaceable by the user.



Waterproof Ideal for the shower or vigorous workout, the WHERESAFE is waterproof to 1 metre of depth for 30 minutes.



Out-of-Range Notification If the WHERESAFE device travels out-of-range from the smartphone, both devices will receive an audio notification.



Compact Design At only 32mm in diameter, the WHERESAFE can fit comfortably wherever you choose to wear it.



Accessories for Multiple Wearing Styles Included in the box are both the Wristband and Keychain/Pendant. (Neck strap is not included.)



Silent Mode For use as a silent alarm or panic button, the user can activate Silent Mode in the App to turn off the alarm or visual notifications.



No Monthly Fees These features are available without any monthly service fees



Product Specifications

Size: 32 mm diameter, 10 mm thickness

Weight: 8 grams

Environment: Waterproof up to 1 metre for 30 minutes

Battery Life: Up to one year depending on use

Battery Type: Pre-inserted and replaceable CR2032 battery

Range: Bluetooth 4.0 technology allows for a range of up to 25 metres indoors and up to 90 metres outdoors between the WHERESAFE and smartphone

Accessories: Wristband, belt clip and pendant/keychain options

Smartphone Platforms: Apple iOS and Google Android (see device compatibility)

The customizable, simple companion WHERESAFE application that will operate on both iOS and Android mobile operating systems, and is also useful not only on schools and campuses, but it also works great if you love to exercise alone in the great outdoors.

In particular, it provides a new freedom for aging, ailing or disabled people who have, until now, been tethered to their home alert systems that require pricey equipment, land lines and long-term contracts.

The WHERESAFE personal emergency alert device can provide urgent communications wherever a person might be, whether on a walk, at the grocery store or simply pottering around in the garden. It gives your family peace of mind knowing that you can summon help should you get into a particularly challenging or difficult situation.

Frequently Asked Questions

Will WHERESAFE work with my phone brand and model?

WHERESAFE works on iPhone 4S/5/5C/5S (IOS 7 or newer) and Samsung Galaxy S3/S4/S5, HTC One, Moto X (any smartphone using Android 4.3 or newer with Bluetooth 4.0).

What is required in my phone to use WHERESAFE?

- Your phone needs to support Bluetooth 4.0 wireless technology
- Bluetooth features on your phone must be turned ON
- WHERESAFE App, either iOS or Android, must be installed and running on your phone
- WHERESAFE must be within range of your phone's Bluetooth coverage
- Location services (GPS) on your phone must be activated for greater accuracy on your location
- Data connection is necessary for WHERESAFE App to send the alert

How many emergency contacts can I have?

WHERESAFE gives you the opportunity to select up to 3 contacts for text message or phone calls.

How many WHERESAFE'S can I have connected to my smartphone?

At the moment you can have only one WHERESAFE connected to your phone at a time.

To find out more or to request a live demonstration, please email sales@wheresafe.com give us a call on **+64 9 263 0700** or visit us at **www.wheresafe.com**

